

www.anemostat-hvac.com



Required items:

- Gloves
- · Needle nose pliers
- Safety glasses/goggles
- Replacement fusible link (165° F rating)



Remove unit from door.

While wearing gloves, hold unit as shown. Block one side edge of FLDL to prevent it from moving; Grasp spring with pliers and carefully pull away from spring securing eye. CAUTION! Spring is now under tension and not properly secured. Keep area clear of unnecessary spectators when

working. Any observers should wear safety glasses.





Replace link as illustrated

Date 5-1-14 TB-014 Page 1 of 2



www.anemostat-hvac.com



Align hole in lock strap with hole in fusible link, then insert spring loop. The open end of loop should point down.



While wearing gloves and safety glasses, use pliers to grasp free loop of spring and firmly grasp FLDL with hand as shown.



Block the side edge of FLDL-UL to prevent it from moving, and then extend spring to hook into securing eye.

Reinstall unit in door.

Date 5-1-14 TB-014 Page 2 of 2