



Auto Heating-Cooling Pattern Changeover

- Diffuser actuators are wired in parallel. Connect all COM together, all CCW together, all CW together and terminate at the adjustable temperature switch.
- 24vac required. VA needed is based on # of diffusers connected to the source.

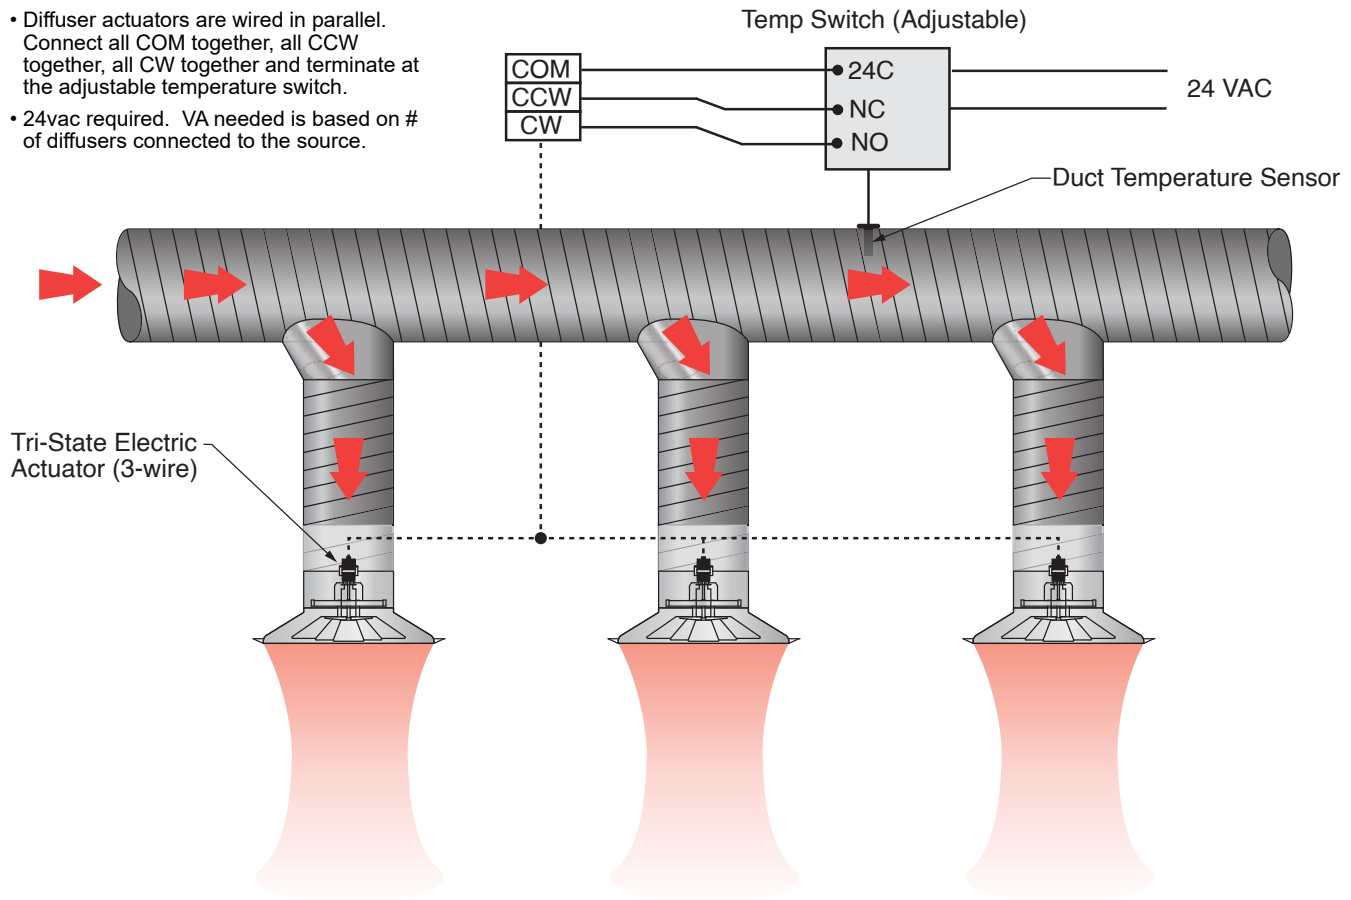

Diffuser Core shown in the up position, typically for heated air.

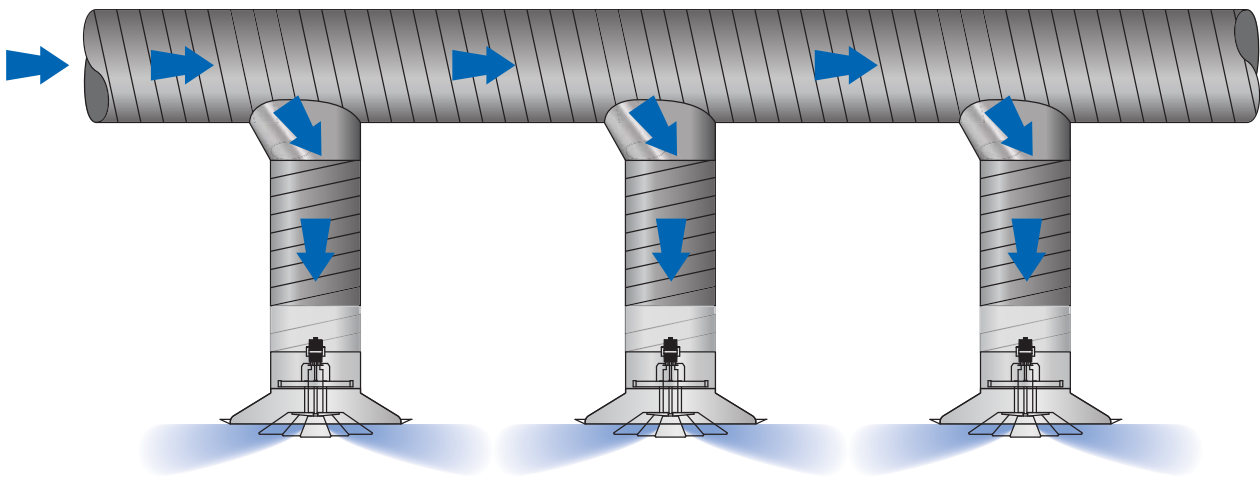

Diffuser Core shown in the down position, typically for cold air.

